

Installation Instructions for the “U” security station


Tools necessary for installation:

- Hammer
- Flathead screwdriver
- Level
- Cordless drill


Right angle 2-way 90° connection

Parts needed for each connection:

- 2 - Right angle 2-way 90° top cap (90P2090EC)
- 2 - Rigid hinge 3-bead 37” long
- 2 - Base plate 2-way 90°
- 2 - Plastic outside cover (38”H x 3”W)
- 8 - 8” pins

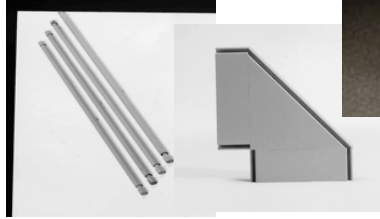

- Step 1. - Slide base plate into the bottom horizontal frame of either panel being connected.
- Step 2. - At the top of each panel, slide the 8” pins into the horizontal grooves in the top frame.
- Step 3. - Slide the two panels together at a 90° angle. Make sure the base plate slides into the other panel.
- Step 4. - Slide the Rigid hinge 3-bead down the adjoining circular ports in each panel.
- Step 5. - Place the Right angle 2-way 90° top cap over the connection
- Step 6. - Slide the 8” pins from each panel into the Right angle 2-way 90° top cap.
- Step 7. - To finish the connection, snap the plastic outside cover into the outside circular ports of each panel.
- Step 8. - Adjust the glides on the bottom of each panel if it is necessary to level the panels on the floor.
- Step 9. - Repeat steps 1-8 for connecting the remaining return panel to the back panel.

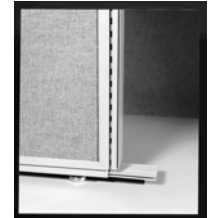

Attaching the counter top to the panels:

Parts:

- 1 - 60 x 24 x 16 “L” shaped counter top
- 3 pr - 5” support bracket (SB5)
- Bracket screws provided




- Step 1. - Center counter top on top of the panels.
- Step 2. - You will need one pair of 5” support brackets on each end of the counter top and one pair in the “corner” portion of the counter top. Each half of the pair goes on opposite sides of the panel to balance the counter top.
- Step 3. - Hook brackets into the top slots of the panel and push the brackets upward to seat into the slots.
- Step 4. - Screw the 5” support brackets into the counter top.

Attaching the optional work surface to the panels

Parts:

- 1 - 60” x 24” work surface
- 1 pr - Support brackets 16” (SB16)
- 1 pr - Return Panel Brackets (RPB)
- Bracket screws provided

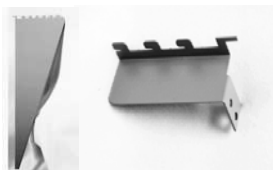

- Step 1. - Position 16” support brackets firmly into the panel slots approximately 28 ¼” off the floor for work height level.
- Step 2. - On the side panel at same level as the 16” support brackets, place a Return Panel Bracket (RPB).
- Step 3. - Rest work surface on brackets and tighten panels around work surface.
- Step 4. - Fasten brackets to work surface with bracket screws provided.